Model: MS62106

# MONSTER

# **BLASTER MICRO**


WEARABLE BLUETOOTH SPEAKER

# **QUICK START GUIDE**

Please read this Quick Start Guide carefully and keep it for future use.

#### **Product Overview**

- ·Wireless Speaker x1
- ·USB-C Cable x1
- ·User Manual x1

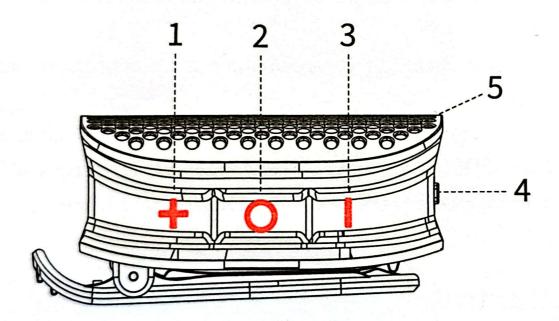

1. Volume Up/Next Song

Long press: Quickly turn up the volume

Short press: Turn up the volume

Double click: Next song

2. Power On/Off

Long press: Turn on/off

Short press: Pause/play/answer/hang up

Double click: TWS connect/disconnect/reject

3. Volume Down/Previous Song

Long press: Quickly turn down the volume

Short press: Turn down the volume


Double click: Previous song

4. USB-C


5. LED

# **LED Indicator Guide**

|                | Description   | Voice/Tone               | Status        |
|----------------|---|--------------------------|---------------|
| 0              | ○White LED light  | Opening tone             | Power on      |
|                | ●White LED off  | Goodbye                  | Power off     |
| Bluetooth      |   | Discovering              | Not connected |
|                | ○White LED light  | Your device is connected | Connected     |
| Battery<br>low | -ÿ-Red LED flashing   | Battery low              | -             |
| Charging       | Charging, red light on.<br>When full, the red light<br>goes off | -                        |               |

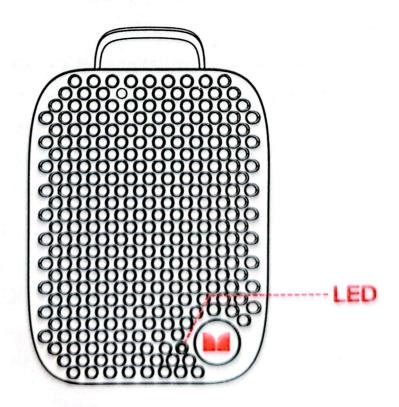

## Charging

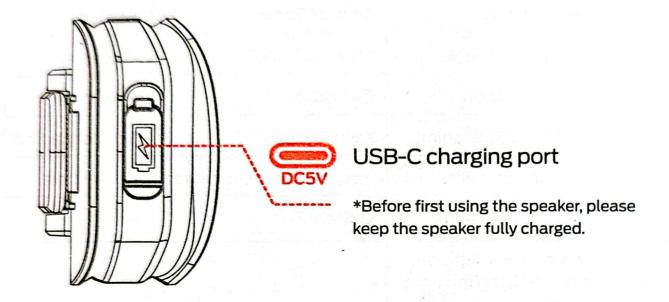

## Power/Charging

For better enjoyment, fully charge the speaker before use.

A USB-C charging cable (charge only) is included for a standard USB-compatible device.

Please use a 5V/1A or above power adapter (not included).

Caution: - Other incompatible charges may cause damages.

- Do not use it if the connector or device is wet or damaged.

#### Power On/Off

In shutdown mode, press and hold the power on/off button for 2 seconds, you will hear a power on tone.

To turn off the speaker, press and hold the power on/off button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

#### **Bluetooth Connection**

- When first used and turned on, the speaker will automatically enter a pairing mode for connection.
- If the Bluetooth device is already connected, press the "+" and "-" button at the same time to disconnect the current connection and connect with other devices.
- The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.
- · When pairing, enable the Bluetooth function of the phone and search for
- "Monster Blaster Micro" to connect. When the connection is successful, you will hear a prompt tone, and the Bluetooth indicator will turn from blinking to long on.

#### **Music Control**

Press the "O" button to play or pause music.

Double click the "+" button to go to the next song.

Double click the "—" button to go to the previous song.

## Volume Control

Short press the "+" button to turn up the volume.

Long press the "+" button to quickly turn up the volume.

Short press the "-" button to turn down the volume.

Long press the "-" button to quickly turn down the volume.

### Call Mode

Answer a call: Short press the "O" button.

Reject a call: Double click the "O" button.

End the call: Short press the "O" button.

# Connect Two Speakers, Stereo Mode (Same Model Only)

- Turn on the two speakers first and do not connect Bluetooth devices (such as mobile phones).
- 2. Press the "O" button twice on any speaker to hear a prompt tone, and the two speakers will automatically pair. After successful pairing, the Bluetooth indicator light of the main speaker will flash, and the Bluetooth indicator light of the secondary speaker will remain on.
- 3. Enable the Bluetooth function on the phone, search for
- "Monster Blaster Micro" to connect. After successful connection, you will hear a prompt tone, the Bluetooth indicator light on the main speaker will become stays on, and the Bluetooth indicator light on the secondary speaker will remain stays on.

#### **Reset Device**

In the power on state, press the power button five times to reset the device.

#### Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

For service, warranty, or product information,
Please contact: customerservice@monster-china.com with your order ID.