

品名：说明书
尺寸：95*110mm
材质：105G双胶
双面一黑一专印刷

正面

Model NO.: MS62112



Hotshot Plus


PORTABLE BLUETOOTH SPEAKERS

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Product Overview

- Speaker
- Charging Cable
- Wireless microphone
- Quick guide and warranty

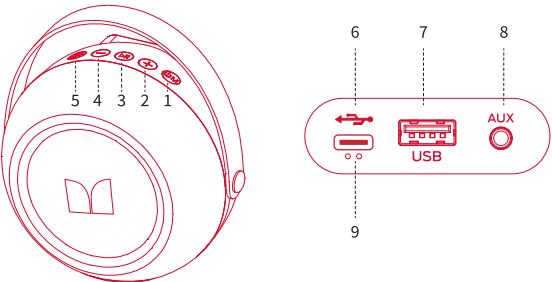

1. Power On/Off

Long press: Power on/off
Short press: Mode switch

2. Next song/Volume up

Long press: Next song
Short press: Volume up

3. Play/Pause

Short press: play/pause

4.Previous song/Volume down

Long press: Previous song
Short press: Volume down

5. Light mode switch

Long press: Turn on/off the light
Short press: Light mode switching

6.USB-C charging

7. **USB (Audio) Input**
Connect a USB storage device


8.AUX Input

External audio devices can be connected using audio cables

9. Bluetooth/Charging indicator

LED indicator/Voice prompt Guide

	Describe	Voice/Tone	Status
	All lights on	Opening Tone	Power on
	All lights off	Goodbye	Power off
-	Blue indicator light is flashing	Discovering	Not connected
	Blue indicator light long on	Your device is connected	Connected
Low battery	-	Low battery	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

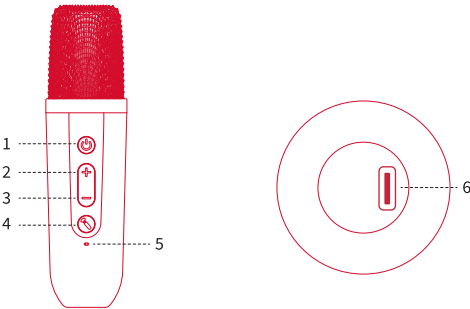

1. Microphone On/Off

Long press: Microphone on/off
Short press: Mute

2. Volume Up/Reverb Up

Single click: Volume up
Double click: Reverb up

3. Volume down/Reverb down

Single click: Volume down
Double click: Reverb down

4. Sound mode

Long press: Switching sound mode
Short press: Accompaniment Vocal switch

5. Indicator light

6. USB-C charging

Power/Charging

For better enjoyment, fully charge the speaker before use.
A USB-C charging cable (charge only) is included for standard USB compatible device.
Please use a 5V/1A or above power adapter (not included).
Caution: - Other incompatible charges may cause damages.
- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.
To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.
Caution: If no Bluetooth device is connected, the speaker will turn off in 10 minutes.

Bluetooth Connection

 
- When first used and turned on, the speaker will automatically enter a waiting mode for connection.
 - If you are connected to a Bluetooth device, press and hold "M" for 5 seconds to disconnect the current connection so that you can connect to another device.
 - The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.
- When connecting, enable the Bluetooth function of the mobile phone, search for "Monster M8" and connect. After the connection is successful, you will hear a voice prompt, Bluetooth indicator light long on.

Music Control

Short press "M" music can be played or paused.
Long press "—" to go to the previous song.
Long press "+" to go to the next song.

Wireless Microphone

When the speaker is on, turn on the power switch on the wireless microphone to use the wireless microphone.



AUX IN Playback

When speaker is on and audio source is inserted via AUX IN (not included) , AUX IN is the priority playback source.If you want to use Bluetooth function, press the "M " Button to switch the source.

USB IN (Audio) Playback

When speaker is on and USB drive is inserted, USB IN (Audio) is the priority playback source.If you want to use Bluetooth function, press the "M " Button to switch the source.

Power saving Settings

- In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 10 minutes.
- AUX IN mode/USB IN (Audio) mode or Bluetooth mode, no music playback for 10 minutes, the speaker will be switched off automatically.

Reset Device

If the speaker needs to be reset, press and hold the "P" button for 8 seconds.

Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For service, warranty, or product information,
Please contact: customerservice@monster-china.com with your order ID.

反面