

Model: MS62109



S150



PORTABLE BLUETOOTH SPEAKER

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Product Overview

- Speaker
- USB-C Charging Cable
- Quick Start Guide & Warranty Letter

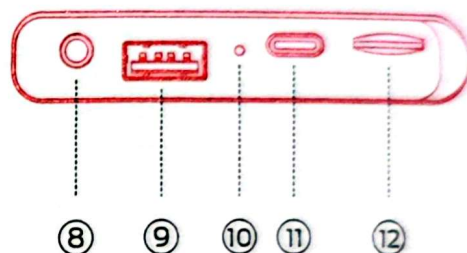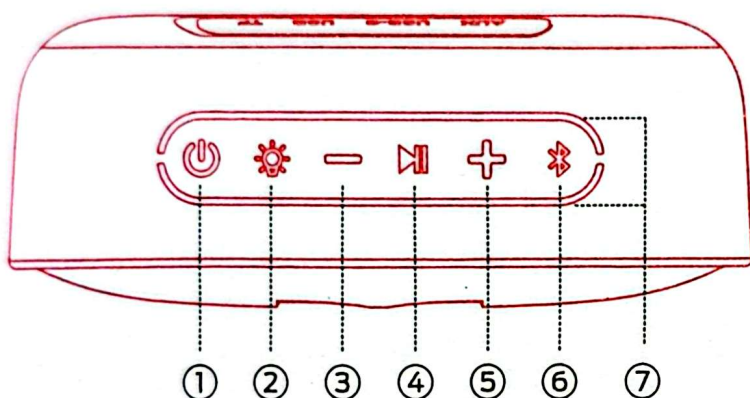

1.Power On/Off

Long press: Power on/off

Short press: Mode switch

2. Light mode switch

Long press: Turn on/off the light

Short press: Light mode switching

3.Previous song/Volume down

Long press: Previous song

Short press: Volume down

4. Play/Pause

Short press: Play/pause

5.Next song/Volume up

Long press: Next song

Short press: Volume up

6.Bluetooth mode

Short press: Disconnect Bluetooth

Double click: Enter/exit Stereo Mode

Hold for 5 seconds to clear all paired device records

7. Indicator Light

8. AUX Input

External audio devices can be connected using audio cables

9.USB (Audio) Input

Connect a USB storage device

10. Charging Indicator Light

11.USB-C Charging

12. Micro SD card Input

Connect a Micro SD card mode storage device

LED indicator/Voice prompt Guide

	Describe	Voice/Tone	Status
Indicator Light	The white light circulates	Power on tone	Power on
	All lights off	Goodbye	Power off
Indicator Light	The white light circulates	Discovering	Not connected
	RGB light mode	Your device is connected	Connected
Low battery	-	Battery low	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

Power/Charging

For better enjoyment, fully charge the speaker before use.

A USB-C charging cable (charge only) is included for standard USB compatible device.

Please use a 5V/1A or above power adapter (not included).

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.

To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

Bluetooth Connection

- When first used and turned on, the speaker will automatically enter a waiting mode for connection.
- If the Bluetooth device is already connected, press "✳" button to disconnect the current connection so that you can connect to another device.
- The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.

When connecting, enable the Bluetooth function of the mobile phone, search for "**Monster S150**" and connect. After the connection is successful, you will hear a voice prompt, the white light of the speaker will change to RGB mode.

Music Control

Short press "▶||" music can be played or paused.

Long press "—" to go to the previous song.

Long press "+" to go to the next song.

Call Mode

Answer a call: Short press the "▶||" button.

Reject a call: Double click the "▶||" button.

End the call: Short press the "▶||" button.

Volume Control

Short press the "+" button to turn up the volume.

Short press the "-" button to turn down the volume.

USB IN (Audio) Playback

When speaker is on and USB drive is inserted, USB IN (Audio) is the priority playback source. If you want to use Bluetooth function, press the "⏻" button to switch the source.

Micro SD Card Playback

When speaker is on and micro SD card (not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the "⏻" button to switch the source.

AUX IN Playback

When speaker is on and audio source is inserted via AUX IN (not included), AUX IN is the priority playback source. If you want to use Bluetooth function, press the "⏻" button to switch the source.

Connect Two Speakers, Stereo Mode (Same Model Only)

1. Turn on two S150 speakers and do not connect to a Bluetooth device (such as a mobile phone).
2. Double click the "⌘" button on one of the speakers twice, and you will hear a voice prompt. The two speakers will automatically pair. After the connection is successful, the white light of the main speaker will flow in a cycle, and the indicator light of the secondary will be in RGB light mode.
3. Enable the Bluetooth function of the mobile phone, search for "**Monster S150**" and connect. After the connection is successful, you will hear a voice prompt, the white light of the main speaker will change to RGB mode, and the indicator light of the secondary will be in RGB light mode.
4. To exit TWS pairing mode, double click the "⌘" button again, and the white light will flow in a cycle.

Power Saving Settings

- In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.
- AUX IN mode/ Micro SD card mode/USB IN (Audio) mode, no music playback for 15 minutes, the speaker will be switched off automatically.

Reset Device

If the speaker needs to be reset, press and hold the "⏻" button for 10 seconds.

Caution

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For service, warranty, or product information,

Please contact: customerservice@monster-china.com with your order ID.